

FunStopPhotos Update Procedure

1. Download the update file from <http://www.teamplayinc.com/fsp/updates.html> to your computer
2. Unzip the two files to a USB Flash Drive
 - a. The two files cannot be in a folder on the flash drive
3. Safely remove the USB Flash Drive from the computer
4. Take the USB Flash Drive with the two files on it to your FunStopPhotos photobooth
5. With the game turned on and running in attract mode, open the coin door
6. Enter the Test menu
7. Plug your USB Flash Drive into the USB drop cable located behind the coin door
 - a. If your FunStopPhotos does not have a USB drop cable behind the coin door, plug the flash drive directly into the I/O board (the bottom board) located behind the inside monitor
8. Press the Up button until Software Update is highlighted on the screen
9. Press the Select button to enter the Software Update menu
10. Press the Up button until photoboothupdatestage1.tar.gz is highlighted, then press the select button
 - a. If photoboothupdatestage1.tar.gz is not listed in the menu, select back from the menu, then re-enter the Software Update menu
 - b. You may have to exit and enter the Software Update menu a few times before the files appear
11. After selecting photoboothupdatestage1.tar.gz, you will see "Please wait while your request is being processed" on the screen
12. After the first stage of the update is complete, you will hear a Ding from the speaker
13. Shortly after the Ding, the screens will go black
14. Wait 5 to 10 minutes while the update is processed, the screen will stay black through the rest of the update
15. After the update has completed successfully, you will see text on the screen and the last line will say "System Halted"
16. When you see the System Halted message, unplug your flash drive
17. Turn the machine off
18. Wait 15 seconds
19. Turn the machine back on
20. When the game is running, go back into the test menu and verify all of your settings are the same