

# Fun Stop Photos Full System Restore

---

*To perform a full system restore, you'll need a USB keyboard.*

1. Power the game off
2. Unplug the main camera from the mother board (the top board)
3. Plug your USB keyboard into the USB port that the main camera was in
4. Turn the game on
5. During boot up, the screen will go blank except for a message that says "Press Esc to enter the recovery menu" and a timer that counts down from 30 seconds
6. When you see the Press Esc message, press the ESC key on the keyboard (usually at the top left corner of the keyboard)
7. A menu will appear asking you which option you want
8. Press the 2 key above the W to indicate you want to perform a full system restore
9. Press the Enter key after you've pressed the 2 key
10. It will ask you to confirm your choice by pressing Y.
11. Press the Y key
12. There will be a progress bar at the bottom of the screen telling you how long it will take to finish the recovery
13. Do not turn off the machine until the recovery has completed
14. You can now unplug the keyboard
15. Plug the main camera back in
16. Close up the game
17. When the recovery is complete, you'll see a message at the bottom of the screen asking you to turn the game off, and then on again
18. Turn the game off, then turn it back on
19. If the restore didn't work, please contact Teamplay at (847) 952 – 7533 M-F 8:00 AM to 5:00 PM central standard time