


Board Installation Layout

After removing the rear panel from the cabinet of your Gen I Fun Stop Photos photo booth, you will see the electronic boards attached to the rear of inside monitor:

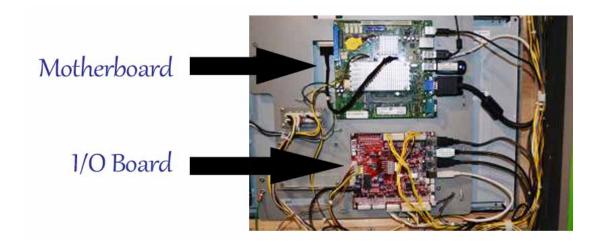


Motherboard

- Inside camera attached;
- I/O board attached;
- Application drive attached;
- Inside monitor is wired directly to the board; and
- Rear monitor is attached by a VGA cable.



I/O Board

- Security dongle inserted;
- Rear camera attached;
- Both printers attached;
- Currency acceptors wired;
- Inside buttons wired.

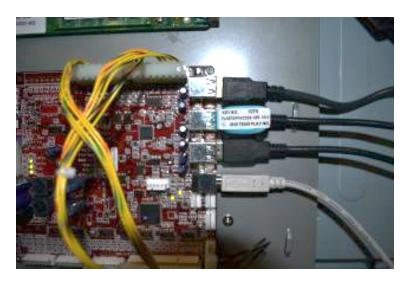

Power Supply (at the top of the cabinet)





For more information, go to the "Technical Support" tab for Fun Stop Photos – Gen I at our web site: www.teamplayinc.com.

View and download the photo booth Manual, Quick Install Guide, System Restore Guide, Detailed Features, Event Scheduling Guide, Customization Guide, and Software Updates at www.teamplayinc.com.