



SETTING BIOS

TO SET THE BIOS YOU WILL NEED A COMPUTER KEYBOARD AND A COMPUTER MONITOR.

WITH THE POWER OFF:



- CONNECT A COMPUTER KEYBOARD TO THE PURPLE CONNECTOR LOCATED UNDER THE MEGA-JAMMA BOARD.
- REMOVE THE 25PIN CONNECTOR FROM THE VIDEO CARD AND PLUG IN THE COMPUTER MONITOR IN ITS PLACE.
- SHORT THE PWR_BTN (POWER BUTTON) PINS ON THE MOTHERBOARD, AS SHOWN BELOW, RELEASING THE SHORT WHEN THE SYSTEM TURNS ON.

YELLOW BOARD

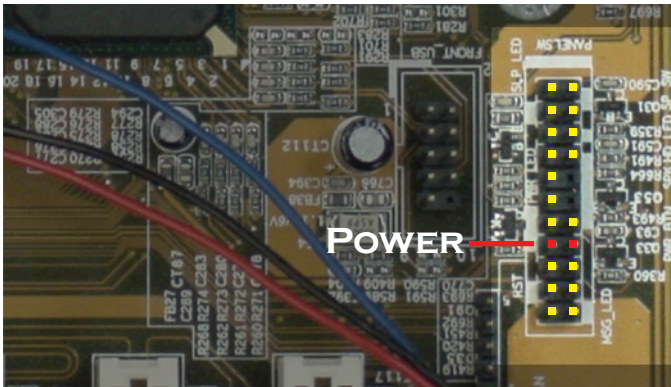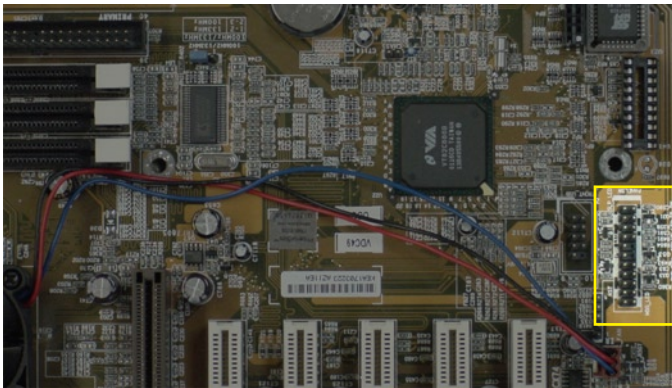

PWR_BTN

RED BOARD

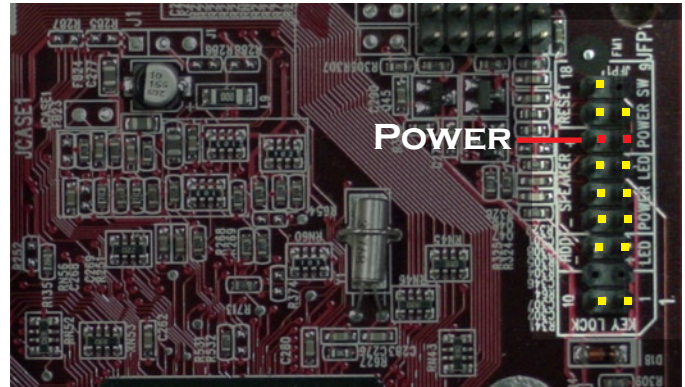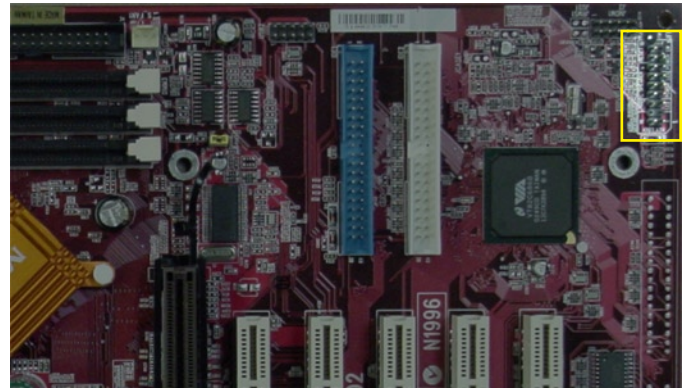

POWER_SW

- WHEN THE SYSTEM STARTS TO BOOT PRESS THE DEL KEY REPEATEDLY UNTIL THE BIOS SETUP SCREEN APPEARS ON THE MONITOR.
- USING THE ARROW KEYS SCROLL THROUGH THE MENUS AND SET THE FOLLOWING OPTIONS:

STANDARD CMOS FEATURES

DRIVE A: NONE
HALT ON: NO ERRORS

ADVANCED BIOS FEATURES

ANTI-VIRUS PROTECTION: DISABLED
FIRST BOOT DEVICE: HDD-0

INTEGRATED PERIPHERALS

ONBOARD PARALLEL MODE: EPP

POWER MANAGEMENT SETUP

VIDEO OFF OPTION: ALWAYS ON
STATE AFTER POWER FAILURE: ON

- WHEN FINISHED SELECT "SAVE AND EXIT SETUP".
- THE SYSTEM WILL REBOOT AND YOUR GAME SHOULD APPEAR ON THE COMPUTER MONITOR.
- AFTER THE GAME APPEARS, TURN THE SYSTEM OFF AND REMOVE THE KEYBOARD AND MONITOR.